RCA

Full Range Audio/Video Extension Speaker

Your Full Range Audio/Video Extension Speaker is a magnetically shielded speaker system which is specially designed not to interfere with your TV or computer monitor. This makes it an ideal choice as a center channel speaker for surround sound, as audio/video speakers, or as a multimedia video speaker.

Connecting the Speaker Wire

Your local Radio Shack store sells a wide selection of speaker wire. We recommend you use wire that is color-coded or marked on one side. Use 18-gauge or larger wire (not supplied) for distances up to 50 feet. For greater distances, use 16-gauge wire (not supplied).

1. Route the speaker wire from your receiver/amplifier to the speaker.

   Note: Avoid routing the speaker wire near other electrical wires, and do not nail or staple the speaker wire.

2. Separate the conductors at each end of the speaker wire for a length of about 4 inches. With a wire stripper, remove about 1/4 inch of insulation from the end of each conductor. Then twist the ends of each conductor to secure loose strands.

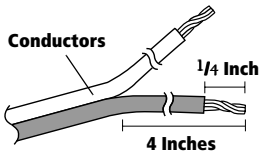

3. Connect the wire to the terminals on the back of the speaker by pressing down on the red positive (+) terminal's tab, inserting one end of the marked conductor, then releasing the tab. Repeat this procedure to connect the other conductor to the black negative (–) terminal.

4. Using the wire's color-coding or marking as a guide, connect the conductor that is connected to the speaker's positive (+) terminal to your receiver/amplifier's (+) terminal. Then connect the conductor that is connected to the speaker's negative (–) terminal to your receiver/amplifier's negative (–) terminal.

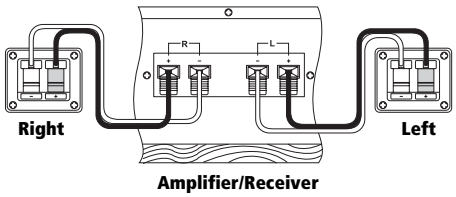

Care

Keep the speaker dry; if it gets wet, wipe it dry immediately. Use and store the speaker only in normal temperature environments. Handle the speaker carefully; do not drop it. Keep the speaker away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new. Do not clean the speaker with a vacuum cleaner. This might permanently damage it. Clean the speaker grille with a feather duster or soft cloth. Do not place equipment on top of the speaker enclosure.

Modifying or tampering with the speaker's internal components can cause a malfunction and invalidate its warranty.

© 2000 Tandy Corporation.
All Rights Reserved.

Troubleshooting

This speaker has been manufactured to the specifications of RadioShack and is covered by a limited warranty from RadioShack. If your speaker is not operating as it should, take it to your local RadioShack store or call 1-800-THE-SHACK for assistance.

Specifications

Frequency Response ..... 150–18,000 Hz

Power Handling ..... 20 Watts (RMS)

Maximum Power ..... 40 Watts

Impedance ..... 8 Ohms

Speaker Complement ..... 4 in Full Range (10 cm)

Dimensions (HWD) ..... 5 × 5 × 4 ½ in (12.8 × 12.8 × 11 cm)

Shipping Weight ..... 2 lb (950g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited Five-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for five (5) years from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell *12/99*

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

40-5024

04A00 Printed in Malaysia